

# NPort S9450I Series Quick Installation Guide

---

**Edition 1.0, February 2017**

## **Technical Support Contact Information** **[www.moxa.com/support](http://www.moxa.com/support)**

### Moxa Americas:

Toll-free: 1-888-669-2872

Tel: 1-714-528-6777

Fax: 1-714-528-6778

### Moxa China (Shanghai office):

Toll-free: 800-820-5036

Tel: +86-21-5258-9955

Fax: +86-21-5258-5505

### Moxa Europe:

Tel: +49-89-3 70 03 99-0

Fax: +49-89-3 70 03 99-99

### Moxa Asia-Pacific:

Tel: +886-2-8919-1230

Fax: +886-2-8919-1231

### Moxa India:

Tel: +91-80-4172-9088

Fax: +91-80-4132-1045

# MOXA®

© 2017 Moxa Inc. All rights reserved.

**P/N: 1802094500010**



## Overview

The NPort S9450I series combines a substation-grade 4-port RS-232/422/485 serial ports device server with a full-function managed Ethernet switch by integrating a combination of fiber and copper Ethernet ports, allowing you to easily install, manage, and maintain the products and serial devices.

## Package Checklist

Before installing the NPort S9450I, verify that the package contains the following items:

- 1 NPort S9450I combo switch/serial device server
- 1 CN20070 connection CBL: RJ45/10P/F9, 150 cm
- 1 DK/DC 50x131 mm DIN-rail kit
- Documentation and software CD
- Quick installation guide
- Warranty card

## Optional Accessories (must be ordered separately)

- Wall-mount kit WK-51-01

*Please notify your sales representative if any of the above items are missing or damaged.*

## Hardware Introduction

**The NPort S9450I** integrates five Ethernet ports and four male DB9 ports for the RS-232/422/485 serial port.

**The NPort S9450I-2S/NPort S9450I-2M** integrates two fiber ports, three Ethernet ports, and four male DB9 ports for the RS-232/422/485 serial port.

**Reset Button**—Hold the Reset button for five seconds to load the factory default settings: Use a pointed object, such as a straightened paper clip or toothpick, to press the reset button. This will cause the Ready LED to blink on and off. The factory defaults will be loaded once the Ready LED stops blinking (after about five seconds). At this point, you should release the reset button.

**LED Indicators**—The NPort S9450I’s front panel contains some LED indicators as described in the following table.

Type	Color	Meaning
PW 1	Green	Power 1 input
PW 2	Green	Power 2 input
Ready	Red	Steady On: Power is on, and the NPort is booting up. Blinking: Indicates a LAN-IP conflict, or the DHCP or BOOTP server did not respond properly.
	Green	Steady On: Power is on, and the NPort is functioning normally. Blinking: The device server has been located by the DSU's (Device Search Utility) location function.
	Off	Power is off, or a power error condition exists.
Master	Green	Steady On: When the NPort is the Master of this Turbo Ring. Blinking: When the NPort is the Ring Master of this Turbo Ring and the Turbo Ring is disconnected.
Coupler	Green	When the NPort enables the coupling function to form a backup path
E1...E5		
Link	Green	Steady On: The Ethernet port is active. Blinking: When the Ethernet port is transmitting/receiving data.
Speed	Green	Steady On: 100 Mbps Ethernet connection.
	Yellow	Steady On: 10 Mbp Ethernet connection.
TX1...TX4	Green	The serial port is transmitting data.
RX1...RX4	Amber	The serial port is receiving data.

## Hardware Installation Procedure

**STEP 1:** After removing the NPort S9450I from the box, attach the power adapter.

**STEP 2:** Connect the NPort S9450I to a network. Use a standard straight-through Ethernet cable to connect to a hub or switch. When setting up or testing the NPort S9450I, you might find it convenient to connect it directly to your computer’s Ethernet port. In this case, use a crossover Ethernet cable.

**STEP 3:** Connect the NPort S9450I’s serial port to a serial device.


**STEP 4:** Mount the NPort S9450I to either a wall or DIN-rail, as described below.

### DIN-Rail Mounting


The aluminum DIN-rail attachment plate should already be fixed to the back panel of the NPort S9450I when you take it out of the box. If you need to reattach the DIN-rail attachment plate to the NPort S9450I, make

sure the stiff metal spring is situated towards the top as shown in the figures below.


**STEP 1:** If the spring-loaded bracket is locked in place, push the recessed button to release it. Once released, you should feel some resistance from the spring as you slide the bracket up and down a few millimeters in each direction.

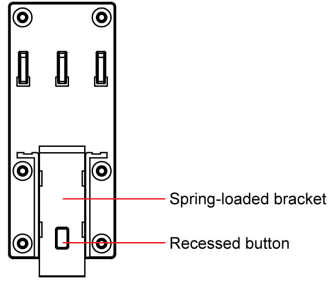


**STEP 2:** Insert the top of the DIN rail into the top slots on the DIN-rail attachment plate.

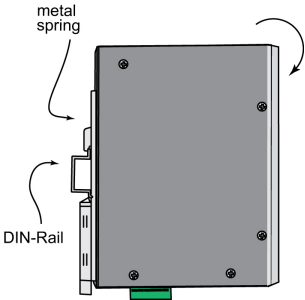

**STEP 3:** The DIN-rail attachment unit will snap into place as shown in the following illustration.

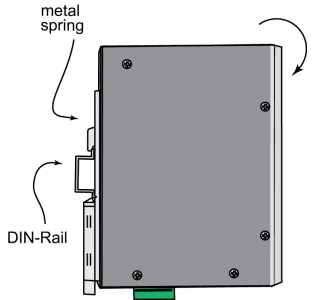


To remove the Moxa NPort S9450I switch from the DIN rail, use a screwdriver to push down the spring-loaded bracket until it locks in place, as shown in the following diagram. Next, rotate the bottom of the switch upwards and then remove the switch from the DIN rail.

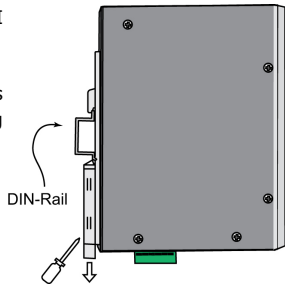


## Wall Mounting (optional)

For added convenience, the NPort S9450I can be wall mounted as illustrated below.

**STEP 1:** Remove the aluminum DIN-rail attachment plate from the NPort S9450I's rear panel, and then attach the wall-mount plates with six M3 screws, as shown on the right.

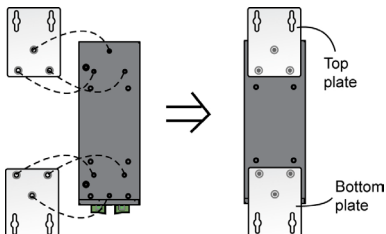

**STEP 2:** Mounting the NPort S9450I to a wall requires four screws. Use the NPort S9450I with the wall-mount plates attached as a guide to mark the correct locations for the four screws. The heads of the screws should be less than 6.0 mm in diameter, and the shafts should be less than 3.5 mm in diameter, as shown on the right.

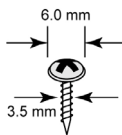

**NOTE** Test the screw's head and shank size by inserting the screw into one of the keyhole-shaped apertures of the wall-mounting plates before you put the screws into the wall.

DO NOT screw the screws all the way in—leave a space of about 2 mm to allow room for sliding the wall-mount panel between the wall and the screws.


**STEP 3:** After the screws are fixed into the wall, insert the four screw heads through the large opening of the keyhole-shaped apertures, and then slide the NPort S9450I downwards. Tighten the four screws for added stability.

## Software Installation Information

The documentation and software CD contains the user's manual, driver, and the Device Search Utility (DSU). Insert the CD into your computer and follow the on-screen instructions. Please refer to the user's manual for additional details on using the Device Search Utility and driver.

## Pin Assignments and Cable Wiring


### DB9 Male RS-232/422/485 Port Pinouts

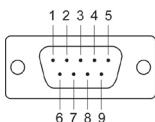

Pin	RS-232	RS-422/485-4w	RS-485-2w
1	DCD	TxD-(A)	-
2	RxD	TxD+(B)	-
3	TxD	RxD+(B)	Data+(B)
4	DTR	RxD-(A)	Data-(A)
5	GND	GND	GND
6	DSR	-	-
7	RTS	-	-
8	CTS	-	-
9	-	-	-

## **Wiring the Relay Contact**

The NPort S9450I has two sets of relay outputs: relay 1 and relay 2. Each relay contact consists of two contacts of the terminal block on the NPort S9450I's top panel. Refer to the next section for detailed instructions on how to connect the wires to the terminal block connector and how to attach the terminal block connector to the terminal block receptor. The two contacts used to connect the relay contacts work as follows (see illustration below):

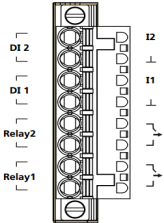


The fault circuit will open if

1. A relay warning event is triggered, or
2. The NPort S9450I is the Master of this Turbo Ring, and the Turbo Ring is disconnected, or
3. Start-up fails.

If none of these three conditions are met, the fault circuit will remain closed.

## **Wiring the Digital Inputs**

The NPort S9450I unit has two sets of digital inputs: DI 1 and DI 2. Each DI consists of two contacts of the 8-pin terminal block connector on the NPort S9450I's top panel.

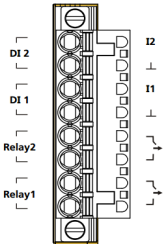


Take the following steps to wire the digital inputs:

1. Insert the negative (ground) or positive DI wires into the terminals.
2. To keep the DI wires from getting loose, use a small flat-blade screwdriver to tighten the wire-clamp screws on the front of the terminal block connector.
3. Insert the plastic terminal block connector prongs into the terminal block receptor, which is located on the NPort S9450I's top panel.

## **Wiring the Redundant Power Inputs**

The NPort S9450I unit has two sets of power inputs: power input 1 and power input 2.

Take the following steps to wire the redundant power inputs:

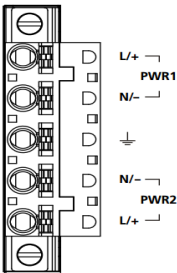

1. Insert the negative/positive DC wires into the N- and L+ terminals.
2. To keep the DC wires from pulling loose, use a small flat-blade screwdriver to tighten the wire-clamp screws on the front of the terminal block connector.
3. Insert the plastic terminal block connector prongs into the terminal block receptor, which is located on the NPort S9450I's top panel.