MGate 5121 Series Quick Installation Guide

Version 1.0, June 2023

Technical Support Contact Information www.moxa.com/support





Overview

The MGate 5121 is an industrial Ethernet gateway for CANopen/J1939 and Modbus TCP network communications.

Package Checklist

Before installing the MGate 5121, verify that the package contains the following items:

- 1 MGate 5121 gateway
- Quick installation guide (printed)
- Warranty card

NOTE Please notify your sales representative if any of the above items are missing or damaged.

Optional Accessories (can be purchased separately)

WK-25: Wall-mounting kit, 2 plates, 4 screws, 25 x 43 x 2 mm

Hardware Introduction

 
LED Indicators


LED	Color	Description			
POWER1 (P1) Green		Power is on.			
POWER2 (P2)	Off	Power is off.			
	Off	Power is off.			
	Green	Steady: Power is on, and the MGate is			
		functioning normally.			
		Blinking (1 sec.): The MGate has been			
		located by the Moxa utility DSU Location			
		function.			
READY (R)		Steady: Power is on, and the MGate is			
	Red	booting up.			
		Blinking slowly (0.5 sec.): Shows an IP			
		conflict, or the DHCP server is not			
		responding properly.			
		Blinking quickly (0.1 sec.): The microSD card			
		failed.			
	Off	No communication			
	Green	Steady: Normal communication in progress.			
MODBUS (MB)		Blinking (1 sec.): Communication error			
[as Modbus TCP	Red	Received an invalid function code			
Server]		2. Master accessed invalid register address			
56,76,1		or coil addresses			
		3. Received frame error (parity error,			
		checksum error)			
	Green	Steady green: In CANopen OPERATIONAL			
		state.			
CAN		Blinking green: In CANopen PRE-			
[as CANopen]		OPERATIONAL state.			
		Single flash: In CANopen STOP state.			
	Red	Steady red: CAN bus off			

LED	Color	Description		
		Single flash: An error counter warning level		
		has been reached.		
		Double flash: A heartbeat event has		
		occurred.		
	Off	No J1939 I/O configured		
	Green	Steady: CAN bus (J1939) communication is		
CAN [as J1939]	Green	receiving or transmitting data.		
		Steady: A communication error occurred		
[43 31333]	Red	1. The J1939 address claim failed		
	Reu	2. CAN is in bus-off state because the error		
		counter is exceeding its limitations.		
CAN TX/RX	Green	Flashing: CAN bus port is receiving data		
CAN IA/KA	Amber	Flashing: CAN bus port is transmitting data		
	Green	Steady ON: Ethernet link on at 100Mbps		
	Green	Blinking: Data transmitting at 100Mbps		
ETH 1, ETH 2	A l	Steady ON: Ethernet link on at 10Mbps		
	Amber	Blinking: Data transmitting at 10Mbps		
	Off	Link is down or not connected		

Panel Layouts


Top View



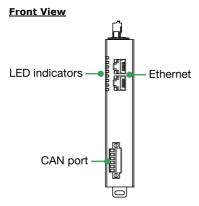



Dimensions

DIN Rail

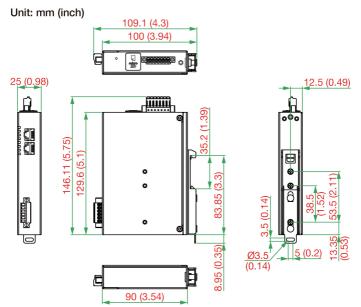


Side DIN Rail Unit: mm (inch)

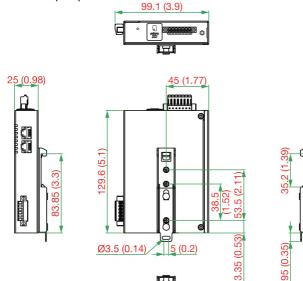

 

90 (3.54)

Wall Mount

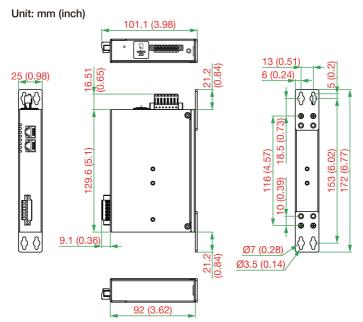

Reset Button

Restore the MGate to factory default settings by using a pointed object (such as a straightened paper clip) to hold the reset button down until the Ready LED stops blinking (approximately five seconds).

Hardware Installation Procedure


- Connect the power adapter. Connect the 12-48 VDC power line or DIN-rail power supply to the MGate 5121's terminal block.
- 2. Use a CAN cable to connect the MGate to the CAN device.
- Use an Ethernet cable to connect the MGate to the Modbus TCP client.
- 4. The MGate 5121 is designed to be attached to a DIN rail or mounted on a wall. For DIN-rail mounting, push down the spring and properly attach it to the DIN rail until it "snaps" into place. For wall mounting, install the wall-mounting kit (optional) first and then screw the device onto the wall.

When wiring the relay contact (R) and power inputs (P1/P2), we suggest using American Wire Gauge (AWG) 16 to 20 as a cable and the corresponding pin-type cable terminals. The stripping length is recommended to be 8 to 9 mm. The wire temperature rating should be at least 85°C. Use copper conductors only. The shielding ground screw (M4) is near the power connector. When you connect the shielded ground wire (min. 16 AWG), the noise is routed from the metal chassis to the ground.

The following figure illustrates the two mounting options:


Wall-Mount Installation

DIN-Rail Installation

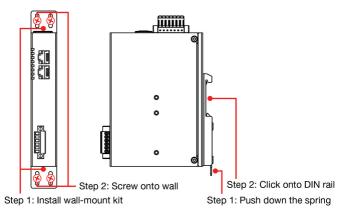

Wall- or Cabinet-mounting

 We provide two metal plates to mount the unit on a wall or inside a cabinet. Attach the plates to the unit's rear panel with screws. With the plates attached, use screws to mount the unit on the wall. The heads of the screws should be 5 to 7 mm in diameter, the shafts should be 3 to 4 mm in diameter, and the length of the screws should be over 10.5 mm.



Software Installation Information

Please download the User Manual and Device Search Utility (DSU) from Moxa's website: www.moxa.com

Moxa's website. www.moxa.com

For using the DSU, refer to the User's Manual. The MGate 5121 also supports login via a web browser.

Default IP address: 192.168.127.254

Create your administration account and password when you log in the first time.

Pin Assignments

CAN Port (6-pin Terminal Block)

Pin	CAN	
1	CAN_L	
2	CAN_H	
3	CAN Signal GND	
4	Ext-CAN_L*	
5	Ext-CAN_H*	
6	CAN_SHLD	




^{*} For the CAN port, plug CAN_L and CAN_H into the terminal block. If another device is connected to the same CAN bus, use the Ext_CAN_L and Ext_CAN_H as extension pins.

Ethernet Port (RJ45)

Pin	Signal	
1	Tx+	
2	Tx-	
3	Rx+	
6	Rx-	



 Power Input and Relay Output Pinouts



	V2+	V2-	Г	- p	\neg	V1+	V1-
ĺ	DC	DC				DC	DC
	Power	Power	N.O.	Common	N.C.	Power	Power
	Input 2	Input 2				Input 1	Input 1

Specifications

Power Parameters				
Power Input	12 to 48 VDC			
Power Consumption	455 mA max.			
Relays				
Contact Current Rating	Resistive load: 2 A @ 30 VDC			
Environmental Limits				
Operating Temperature	Standard models: -10 to 60°C (14 to 140°F)			
	Wide temp. models: -40 to 75°C (-40 to 167°F)			
Storage Temperature	-40 to 85°C (-40 to 185°F)			
(package included)				
Ambient Relative Humidity	5 to 95% RH			
Physical Characteristics				
Dimensions	25 x 90 x 129.6 mm (0.98 x 3.54 x 5.1 in)			
Weight	294 g (0.65 lb)			
Reliability				
Alert Tools	Built-in buzzer and RTC			
MTBF	1,408,984 hrs.			



Hot surface label.



Functional earth terminal.



ATTENTION

- This device is an open-type equipment and intended to be installed in a suitable enclosure.
- If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.
- When installing the device, the assembler is responsible for the securing the safety of the system in which the equipment is incorporated.

NOTE

- This device is intended for use indoors and at altitudes up to 2,000 meters.
- Pollution degree 2.

NOTE Clean the device with a soft cloth, dry or with water.

NOTE The power input specification complies with the requirements of SELV (Safety Extra Low Voltage), and the power supply should comply with UL 61010-1 and UL 61010-2-201.



WARNING

사용자안내문 (User Guide)

이 기기는 업무용 환경에서 사용할 목적으로 적합성평가를 받은

기기로서가정용 환경에서 사용하는 경우 전파간섭의 우려가 있습니다.

This equipment has KC approval to be used for industrial environments and therefore it has the possibility of interferences with household equipment.

For any repair or maintenance needs, please contact us. Moxa Inc.

No. 1111, Heping Rd., Bade Dist., Taoyuan City 334004, Taiwan +886-03-2737575