

# AWK-6232

## Quick Installation Guide

---

Moxa AirWorks

Edition 5.0, February 2017

### Technical Support Contact Information

[www.moxa.com/support](http://www.moxa.com/support)

Moxa Americas:

Toll-free: 1-888-669-2872

Tel: 1-714-528-6777

Fax: 1-714-528-6778

Moxa China (Shanghai office):

Toll-free: 800-820-5036

Tel: +86-21-5258-9955

Fax: +86-21-5258-5505

Moxa Europe:

Tel: +49-89-3 70 03 99-0

Fax: +49-89-3 70 03 99-99

Moxa Asia-Pacific:

Tel: +886-2-8919-1230

Fax: +886-2-8919-1231

Moxa India:

Tel: +91-80-4172-9088

Fax: +91-80-4132-1045

**MOXA**®

© 2017 Moxa Inc. All rights reserved.

P/N: 1802062320014



## Notes for the Reader



### **WARNING**

Indicates that death or personal injury may occur if proper precautions are not taken.



### **ATTENTION**

Indicates that possible damage to this product or your property may result if proper precautions are not taken.

**NOTE** Highlights important information related to this product.

## Package Checklist

Moxa's AWK-6232 is shipped with the following items. If any of these items is missing or damaged, contact your customer service representative for assistance.

- AWK-6232 wireless AP/bridge/client
- 4 Dual-band omnidirectional antennas (5/2 dBi, N-type male, 2.4 GHz /5 GHz)
- Wall-mounting kit (includes 2 supports)
- Field-installable power plug
- Field-installable Ethernet plug
- 1 metal cap to cover RJ45 connector
- 1 metal cap to cover M12-female LAN connector
- 1 metal cap to cover M12-male DI/O connector
- 2 transparent plastic sticks for field-installable plugs
- Documentation and software CD
- Quick installation guide (printed)
- Warranty card

## Recommended SFP Accessories

### **SFP-1G series**

- SFP-1GSXLC: Small form factor pluggable transceiver with 1000BaseSX, LC, 0.5 km, 0 to 60°C
- SFP-1GSXLC-T: Small form factor pluggable transceiver with 1000BaseSX, LC, 0.5 km, -20 to 75°C
- SFP-1GLSXLC: Small form factor pluggable transceiver with 1000BaseLSX, LC, 2 km, 0 to 60°C
- SFP-1GLSXLC-T: Small form factor pluggable transceiver with 1000BaseLSX, LC, 2 km, -40 to 85°C
- SFP-1GLXLC: Small form factor pluggable transceiver with 1000BaseLX, LC, 10 km, 0 to 60°C
- SFP-1GLXLC-T: Small form factor pluggable transceiver with 1000BaseLX, LC, 10 km, -40 to 85°C
- SFP-1GLHLC: Small form factor pluggable transceiver with 1000BaseLH, LC, 30 km, 0 to 60°C

- SFP-1GLHLC-T: Small form factor pluggable transceiver with 1000BaseLH, LC, 30 km, -40 to 85°C
- SFP-1GLHXLC: Small form factor pluggable transceiver with 1000BaseLHX, LC, 40 km, 0 to 60°C
- SFP-1GLHXLC-T: Small form factor pluggable transceiver with 1000BaseLHX, LC, 40 km, -40 to 85°C
- SFP-1GZXLC: Small form factor pluggable transceiver with 1000BaseZX, LC, 80 km, 0 to 60°C
- SFP-1GZXLC-T: Small form factor pluggable transceiver with 1000BaseZX, LC, 80 km, -40 to 85°C
- SFP-1GEZXC: Small form factor pluggable transceiver with 1000BaseEZC, LC, 110 km, 0 to 60°C
- SFP-1GEZXC-120: Small form factor pluggable transceiver with 1000BaseEZC, LC, 120 km, 0 to 60°C

**NOTE** The above items come with the AWK-6232 standard version. The package contents for customized versions may be different.

## Installation

Before installing the AWK-6232, make sure that all items in the Package Checklist are in the box. In addition, you will need access to a notebook computer or PC equipped with an Ethernet port. The AWK-6232 has a default IP address, user name and password that you must use when resetting or connecting to your AWK-6232 device.

Default IP address: **192.168.127.253**

User name: **admin**

Password: **root**

Please read "**Chapter2 Getting Started**" in AWK-6232 User's Manual for more details about installation and configuration.




### ATTENTION

For security reasons, we strongly recommend changing the password. To do so, go to **Maintenance → Password**, and then follow the on-screen instructions.

**NOTE** To make the change effective, you must save the change and then click **Restart → Save** and **Restart** button to apply all changes.


## Panel Layout of the AWK-6232

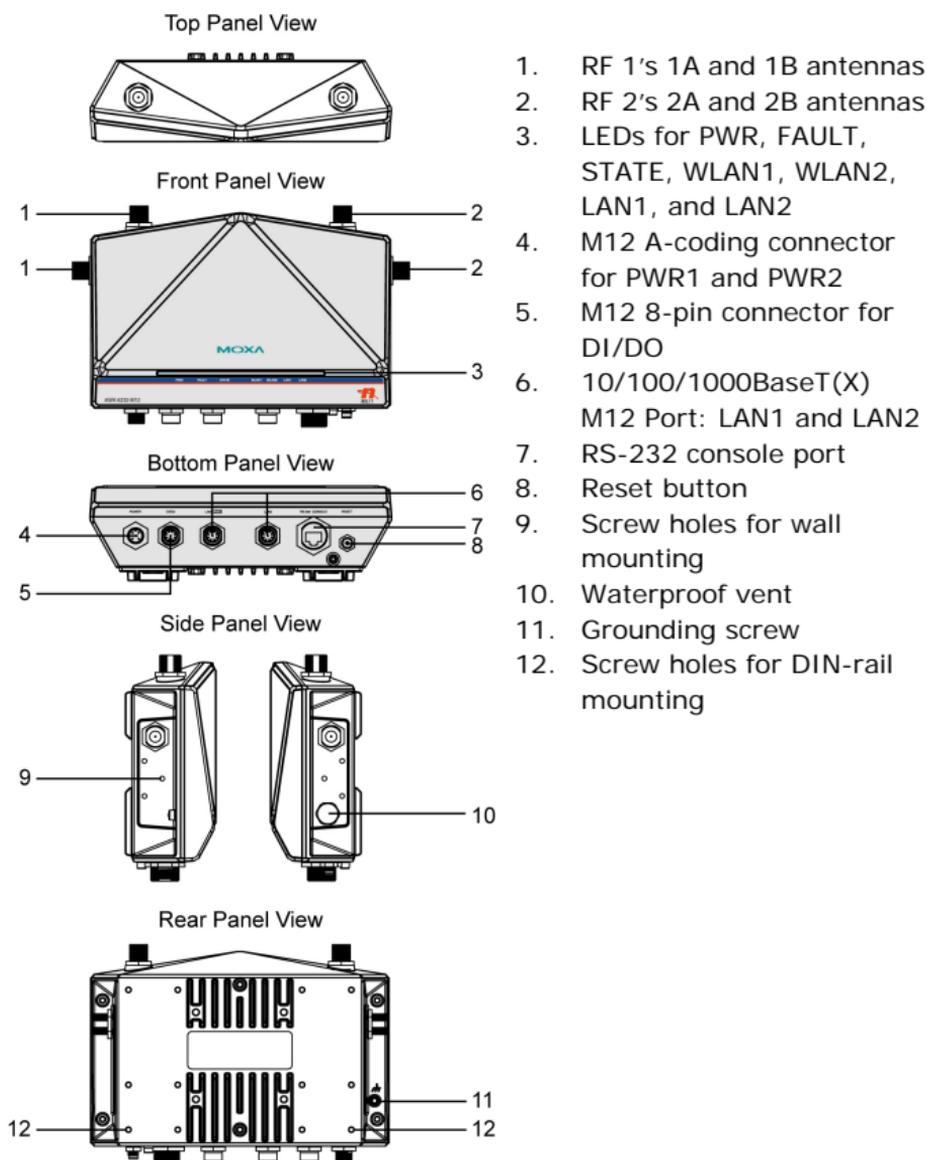

### ATTENTION


Please DO NOT open or remove the vent (item **10**, in the diagram). The warranty will be invalid if the seal is removed. All exposed connectors, including items **1**, **2**, & **4-7**, should be tightly covered by suitable caps when they are not in use.

## Dimensions (unit = mm)

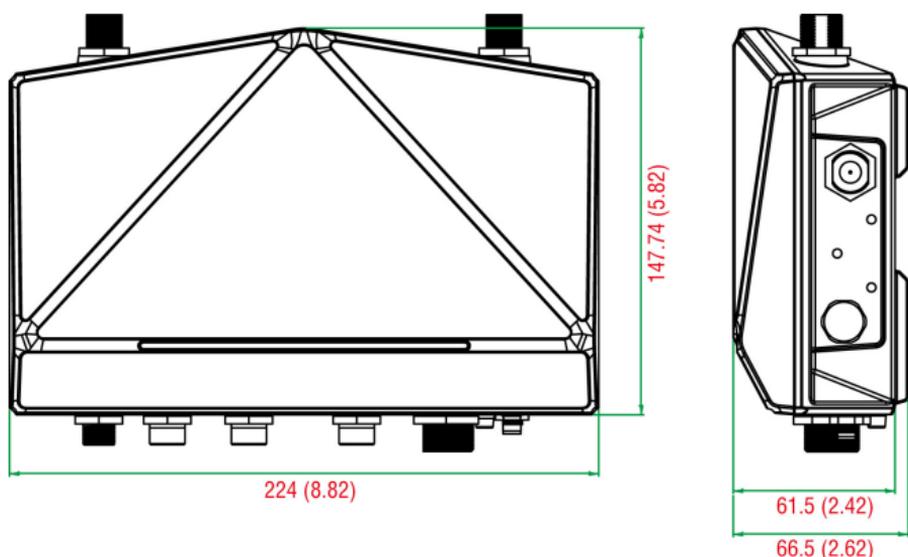

## Attaching Antennas

The AWK-6232 includes two dual-band omnidirectional antennas by default. Attach the antennas as illustrated below:

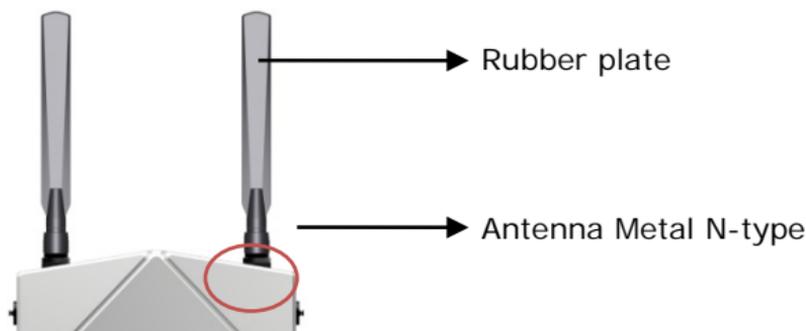

**Step 1:** Hold the antenna metal N-type connector.

**Step 2:** Screw the antenna N-type connector (male) onto the AWK-6232 device's N-type connector (female)



### Caution

Do not hold the rubber plate to screw the antenna on to the AWK-6232 device.



### ATTENTION

#### Use the antennas correctly!!


Use 2.4 GHz antennas if the AWK-6232 operates in IEEE 802.11b/g/n. Use the 5 GHz antennas for operations in IEEE802.11a/n. Make sure your antenna installation is within a safe area covered by a lightning protection or surge arrest system.

## Wall Mounting

In most applications, wall mount provides an easier installation. You will find it quite easy to mount AWK-6232 on the wall, as illustrated below.


### STEP 1:

Attach the wall-mounting kit with M4 screws, as shown in the diagram below.

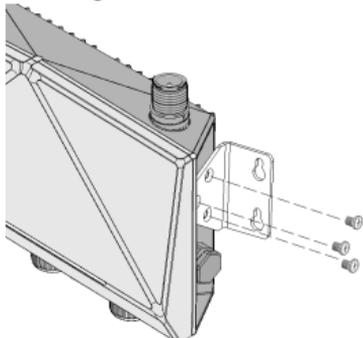

### STEP 2:

Mounting the AWK-6232 on the wall requires 4 screws. Use the AWK-6232 device, with wall-mounting kit attached, as a guide to mark the correct locations of the 4 screws. The heads of the screws are recommended to be between 5.5mm and 8.5 mm in diameter, and the shafts should not be more than 5.0 mm in diameter, as shown in the figure.

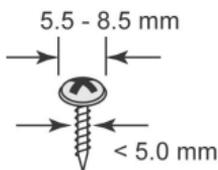

Do not drive the screws in all the way into the wall—leave a space of about 2 mm to allow room for sliding the wall-mounting kit between the wall and the screws.




## ATTENTION

Test the screw head and shank size by inserting the screws into one of the keyhole shaped apertures of the wall-mounting plates before attaching the plates to the wall.

### STEP 3:


Once the screws are fixed into the wall, insert the four screw heads through the large opening of the keyhole-shaped apertures, and then slide the AWK-6232 downwards, as indicated to the right. Tighten the four screws for added stability.

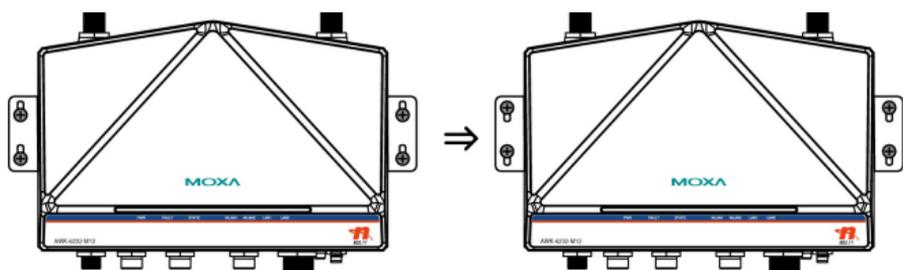

## ATTENTION

To avoid environmental vibration or shock, you can consider a robust installation with four bigger screws, whose shafts are between 7.0 mm and 8.5 mm in diameter, and fix the AWK-6232 directly onto wall before tightening the screws to secure it.

## DIN-Rail Mounting (Optional)

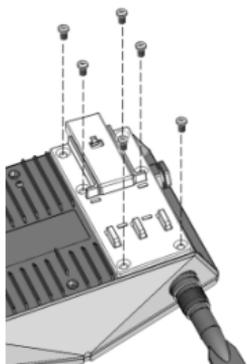


The DK-DC50131 die-cast metal kit, which can be bought separately, is required to enable easy and robust installation for the AWK-6232. A pair of DK-DC50131s is needed for DIN-rail mounting of the AWK-6232. Attach the DIN-rail mounting kits to the rear panel of AWK-6232 with 12 screws. (6 screws for each kit) as shown in the illustration.

### To Install

#### STEP 1:

Use the recessed button on the spring-loaded bracket to lock it into position.

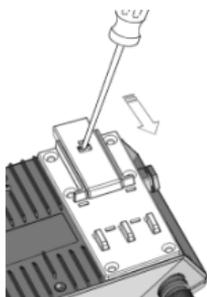

#### STEP 2:


Insert the top of the DIN rail into the slot just below the upper hook of the DIN-rail mounting kit. Push the AWK-6232 toward the DIN rail until the DIN-rail attachment bracket snaps into place.



### To Release


#### STEP 1:

Pull out the two spring-loaded brackets from the bottom until they are fixed in the "release" position.

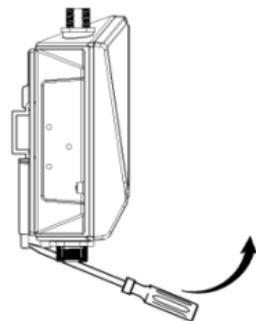

#### STEP 2:

Pull the AWK-6232 out and upward.

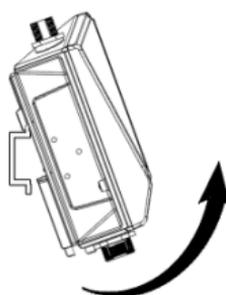

## Wiring Requirements



### WARNING

#### Safety First!

Be sure to disconnect the power cord before installing and/or wiring your Moxa AWK-6232.

Calculate the maximum possible current in each power wire and common wire. Observe all electrical codes dictating the maximum current allowable for each wire size. If the current goes above the maximum ratings, the wiring could overheat, causing serious damage to your equipment.

You should also pay attention to the following items:

- Use separate paths to route wiring for power and devices. If power wiring and device wiring paths must cross, make sure the wires are perpendicular at the intersection point.

**NOTE** Do not run signal or communications wiring and power wiring in the same wire conduit. To avoid interference, wires with different signal characteristics should be routed separately.

- You can use the type of signal transmitted through a wire to determine which wires should be kept separate. The rule of thumb is that wiring with similar electrical characteristics can be bundled together.
- Keep input wiring and output wiring separate.
- It is strongly advised that you label wiring to all devices in the system when necessary.

## Grounding Moxa AWK-6232

Grounding and wire routing help limit the effects of noise due to electromagnetic interference (EMI). Run the ground connection from the ground screw to the grounding surface prior to connecting devices.




### ATTENTION

This product is intended to be mounted to a well-grounded mounting surface, such as a metal panel. There must be no potential difference between two ground potentials, otherwise there is a risk that the device could be destroyed.

## Installations with Unstable Power Inputs


There are cases where the device has to be wired to the same power source as other equipment. In such cases if equipment such as motors that are connected in the circuit draw a large amount of current during operation, the transient voltage drop could potentially cause the AWK to become unstable. Installing a DC/DC power isolator in between the two equipment is recommended to isolate the transient effect and to ensure a

stable power input for the AWK.

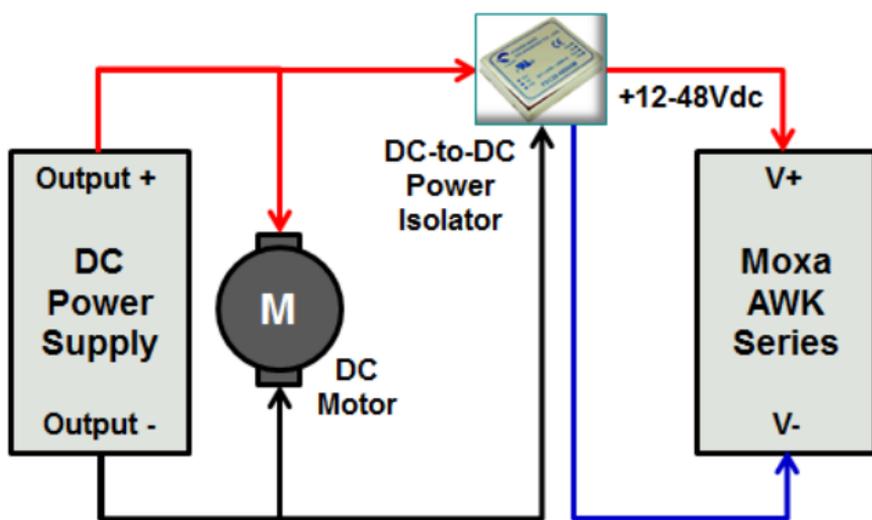

## Installations with Cable Extended Antennas for Outdoor Applications

If the antenna or the AWK device is installed outdoors or in an open-air setting, proper lightning protection is required to prevent direct lightning strikes on the AWK device. In order to prevent coupling currents from nearby lightning strikes, a lightning arrester should be installed as part of your antenna system. Ground the device, antenna, as well as the arrester properly to provide maximum outdoor protection for the device.

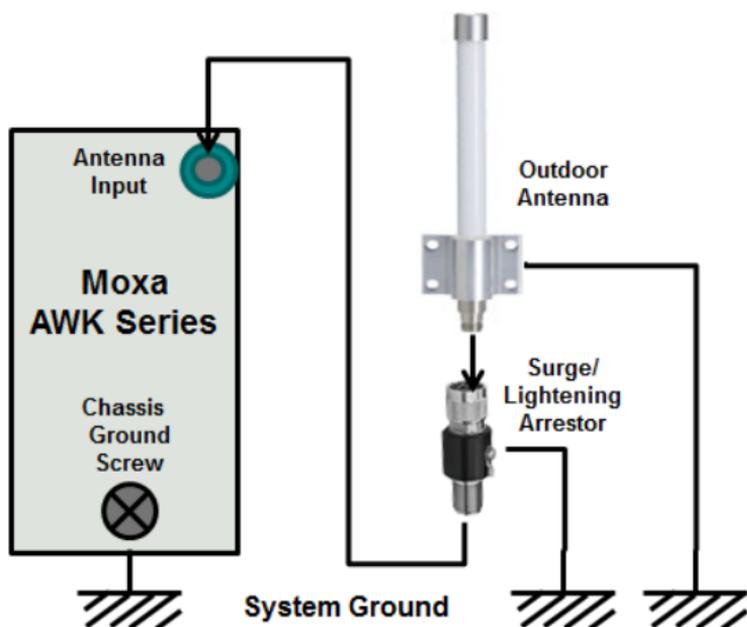


### Arrester Accessories

- **SA-NMNF-01:** Surge arrester, N-type (male) to N-type (female)
- **SA-NFNF-01:** Surge arrester, N-type (female) to N-type (female)

## Wiring the Redundant Power Inputs

The AWK-6232 must be connected to a Power over Ethernet Plus (PoE+) IEEE 802.3at compliant power source or an IEC60950 compliant limited power source. When AWK-6232 is powered via DC power, the M12 A-coding connector on the bottom panel is used for the AWK-6232's two redundant inputs. The male, device-side pin assignment is shown below:

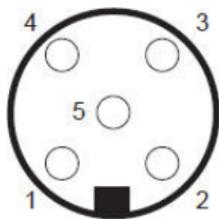

| Pin | Power Input |
|-----|-------------|
| 1   | V1+         |
| 2   | V2+         |
| 3   | V1-         |
| 4   | V2-         |
| 5   | GND         |



### ATTENTION

This product is intended to be supplied by a Listed Power Unit marked "Class 2" or "LPS" and rated O/P: 18 W.

Make sure the external power adapter (includes power cords and plug assemblies) provided with the unit is certified and suitable for use in your country.

Before connecting the AWK-6232 to the DC power inputs, make sure the DC power source voltage is stable.



### ATTENTION

Do not use a PoE injector with the PoE (Power-over-Ethernet) model. Instead, use an IEEE802.3af or IEEE802.3at compliant PSE (Power Sourcing Equipment).


## Wiring the Digital Inputs and Relay Contact

### (Digital Output)


The AWK-6232 has two sets of digital input—DI1 and DI2. Each DI comprises two contacts of the 8-pin M12 connector on the AWK-6232's bottom panel. These two digital inputs can be connected to digital-output-enabled sensors for on-site status monitoring.

The AWK-6232 also has one relay output, which consists of the two contacts. These relay contacts are used to detect user-configured events. The two wires attached to the Relay contacts form an open circuit when a user-configured event is triggered. If a user-configured event does not occur, the Relay circuit will be closed.

A field-installable plug, **M12A-8PF-IP67**, is recommended for connecting the AWK-6232's DIs and relay.

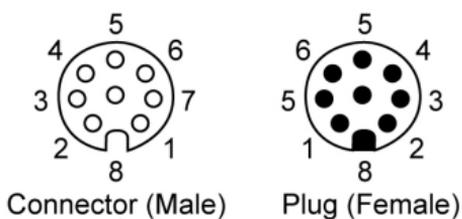

| Pin | Signal    |
|-----|-----------|
| 1   | Relay     |
| 2   |           |
| 3   | DI1 I1    |
| 4   | DI1 COM_1 |
| 5   | DI2 I2    |
| 6   | DI2 COM_2 |
| 7   | Reserved  |
| 8   |           |

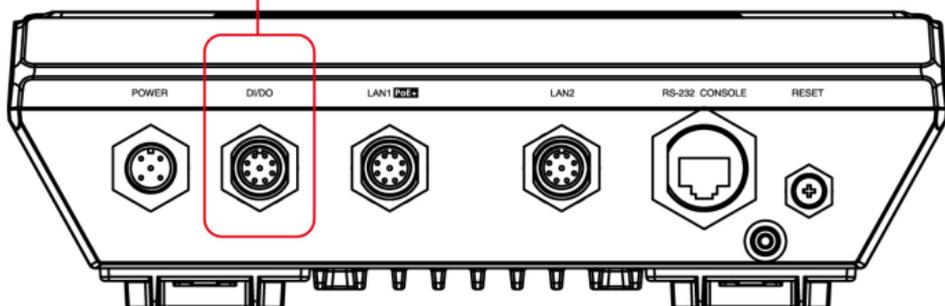

## Communication Connections


### Connecting the Data Lines

#### 10/100/1000BaseT(X) Ethernet Port Connection

AWK-6232 has 10/100/1000BaseT(X) Ethernet ports (8-pin shielded M12 A-coded connector). The 10/100/1000BaseT(X) ports located on the AWK-6232's bottom panel are used to connect to Ethernet-enabled devices. Below we show pinouts for both MDI (NIC-type) ports and MDI-X (HUB/Switch-type) ports.

#### Pinouts for the 10/100/1000BaseT(X) M12 (8-pin) Port

| PIN | Con.  |
|-----|-------|
| 1   | TRD3+ |
| 2   | TRD4+ |
| 3   | TRD4- |
| 4   | TRD1- |
| 5   | TRD2+ |
| 6   | TRD1+ |
| 7   | TRD3- |
| 8   | TRD2- |

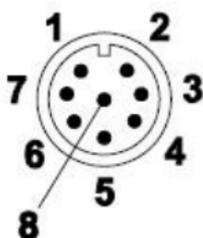




## ATTENTION


To ensure the IP68-rated connectivity, you must use a waterproof housing during any communication activities. An IP68-rated field installable plug, which is attached in AWK-6232's accessory pack, may be needed in this case. The installation instructions are given below:

## Ethernet M12 Plug

### Dimensions (unit: mm)

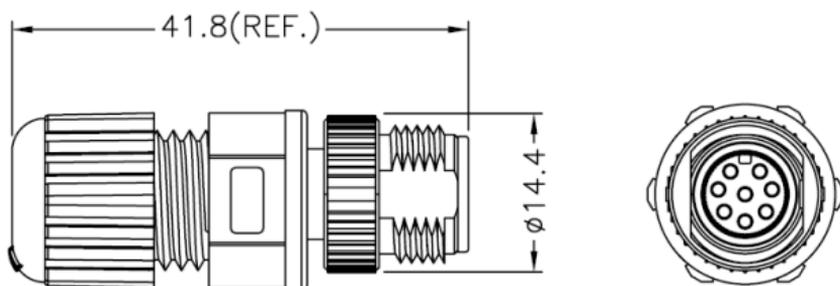

### Installation

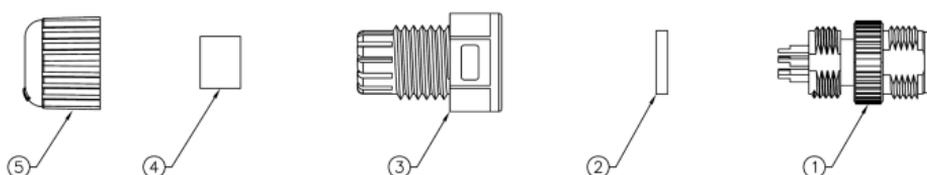


1. Refer to the pin assignment and solder wires with ①;
2. Then assemble ②, ③, ④, and ⑤ in order;
3. Test the plug to ensure the quality.

## RS-232 Connection

The AWK-6232 has one RS-232 (8-pin RJ45) console port located on the bottom panel. Use either an RJ45-to-DB9 or RJ45-to-DB25 cable to connect the Moxa AWK-6232's console port to your PC's COM port. You may then use a console terminal program to access the AWK-6232 for console configuration.

### Console Pinouts for 10-pin or 8-pin RJ45

| 10-Pin | Description | 8-Pin |
|--------|-------------|-------|
| 1      | –           |       |
| 2      | DSR         | 1     |
| 3      | RTS         | 2     |
| 4      | GND         | 3     |
| 5      | TxD         | 4     |
| 6      | RxD         | 5     |
| 7      | DCD         | 6     |
| 8      | CTS         | 7     |
| 9      | DTR         | 8     |
| 10     | –           |       |

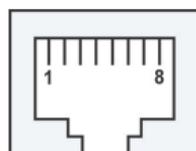

- NOTE**
1. The pin numbers for the DB9 and DB25 male connectors, and hole numbers for DB9 and DB25 female connectors are labeled on the connector strip. However, the numbers are typically quite small, so you may need to use a magnifying glass to see the numbers clearly.
  2. The pin numbers for both 8-pin and 10-pin RJ45 connectors (and ports) are typically not labeled on the connectors (or ports). Refer to the pinout diagram for details.



## ATTENTION

For railway rolling stock applications, AWK-6232 devices must use a galvanically isolated power supply that is compliant with the EN 50155 standard.

## LED Indicators

The front panel of the Moxa AWK-6232 contains several LED indicators. The function of each LED is described in the table below.

| LED                     | Color           | State                                   | Description  |
|-------------------------|-----------------|---|--|
| PWR                     | Green           | On                                      | Power is being supplied (from power input 1 or 2, or PoE)    |
|                         |                 | Off                                     | Power is not being supplied                                  |
| FAULT                   | Red             | Blinking (slow at 1-second intervals)   | Cannot get an IP address from the DHCP server                |
|                         |                 | Blinking (fast at 0.5-second intervals) | IP address conflict  |
|                         |                 | Off                                     | Error condition does not exist                               |
| STATE                   | Green/<br>Red   | Green                                   | System startup is complete and the system is in operation.   |
|                         |                 | Green, (blinking at 1-second intervals) | The AWK has been located by the Wireless Search Utility.     |
|                         |                 | Red                                     | Booting is booting up or an error condition exists           |
| WLAN 1<br>and<br>WLAN 2 | Green/<br>Amber | Green, on                               | Device is connected to a WLAN in <b>Client/Slave</b> mode    |
|                         |                 | Green, blinking                         | Device is transmitting WLAN data in <b>Client/Slave</b> mode |
|                         |                 | Amber, on                               | Device is connected to a WLAN in <b>AP/Master</b> mode       |
|                         |                 | Amber, blinking                         | Device is transmitting WLAN data in <b>AP/Master</b> mode    |
|                         |                 | Off                                     | WLAN is not in use or not working properly                   |

| LED                   | Color           | State           | Description   |
|-----------------------|-----------------|-----------------|---|
| LAN 1<br>and<br>LAN 2 | Amber/<br>Green | Amber, on       | The 10/100 Mbps link on the device's LAN port is active |
|                       |                 | Amber, blinking | Device is transmitting LAN data at 10/100 Mbps          |
|                       |                 | Amber, off      | 10/100 Mbps LAN port link is inactive                   |
|                       |                 | Green, on       | 1000 Mbps LAN port link is active                       |
|                       |                 | Green, blinking | Device is transmitting LAN data at 1000 Mbps            |
|                       |                 | Green, off      | 1000 Mbps LAN port link is inactive                     |

## Specifications

| WLAN Interface                           |   |
|--|---|
| Standards                                | IEEE 802.11a/b/g/n for Wireless LAN<br>IEEE 802.11i for Wireless Security<br>IEEE 802.3 for 10BaseT<br>IEEE 802.3u for 100BaseTX<br>IEEE 802.3ab for 1000BaseT<br>IEEE 802.3at for Power-over-Ethernet Plus<br>IEEE 802.1D for Spanning Tree Protocol<br>IEEE 802.1w for Rapid STP<br>IEEE 802.1Q VLAN  |
| Spread Spectrum and Modulation (typical) | <ul style="list-style-type: none"> <li>• DSSS with DBPSK, DQPSK, CCK</li> <li>• OFDM with BPSK, QPSK, 16QAM, 64QAM</li> <li>• 802.11b: CCK @ 11/5.5 Mbps, DQPSK @ 2 Mbps, DBPSK @ 1 Mbps</li> <li>• 802.11a/g: 64QAM @ 54/48 Mbps, 16QAM @ 36/24 Mbps, QPSK @ 18/12 Mbps, BPSK @ 9/6 Mbps</li> <li>• 802.11n: 64QAM @ 300 Mbps to BPSK @ 6.5 Mbps (multiple rates supported)</li> </ul> |
| Operating Channels (central frequency)   | US:<br>2.412 to 2.462 GHz (11 channels)<br>5.18 to 5.24 GHz (4 channels)<br>EU:<br>2.412 to 2.472 GHz (13 channels)<br>5.18 to 5.24 GHz (4 channels)<br>JP:<br>2.412 to 2.472 GHz (13 channels, OFDM)<br>2.412 to 2.484 GHz (14 channels, DSSS)<br>5.18 to 5.24 GHz (4 channels for W52)  |
| Security                                 | <ul style="list-style-type: none"> <li>• SSID broadcast enable/disable</li> <li>• Firewall for MAC/IP/Protocol/Port-based filtering</li> <li>• 64-bit and 128-bit WEP encryption, WPA/WPA2-Personal and Enterprise (IEEE 802.1X/RADIUS, TKIP, and AES)</li> </ul>   |
| Transmission Rates                       | 802.11b: 1, 2, 5.5, 11 Mbps<br>802.11a/g: 6, 9, 12, 18, 24, 36, 48, 54 Mbps<br>802.11n: 6.5 to 300 Mbps (multiple rates supported)  |
| Transmitter Power                        | 802.11b:<br>Typ. 18±1.5 dBm @ 1 to 11 Mbps<br>802.11g:<br>Typ. 18±1.5 dBm @ 6 to 24 Mbps,   |

|                                 |  |
|---------------------------------|--|
|                                 | <p>Typ. 17±1.5 dBm @ 36 to 48 Mbps,<br/> Typ. 15±1.5 dBm @ 54 Mbps</p> <p>802.11n (2.4 GHz):<br/> Typ. 14±1.5 dBm @ MCS15 20 MHz</p> <p>802.11a:<br/> Typ. 17±1.5 dBm @ 6 to 24 Mbps,<br/> Typ. 16±1.5 dBm @ 36 to 48 Mbps,<br/> Typ. 14±1.5 dBm @ 54 Mbps</p> <p>802.11n (5 GHz):<br/> Typ. 13±1.5 dBm @ MCS15 20 MHz,<br/> Typ. 12±1.5 dBm @ MCS15 40 MHz)</p>   |
| Receiver Sensitivity            | <p>802.11b:<br/> -92 dBm @ 1 Mbps, -90 dBm @ 2 Mbps,<br/> -88 dBm @ 5.5 Mbps, -84 dBm @ 11 Mbps</p> <p>802.11g:<br/> -87 dBm @ 6 Mbps, -86 dBm @ 9 Mbps,<br/> -85 dBm @ 12 Mbps, -82 dBm @ 18 Mbps,<br/> -80 dBm @ 24 Mbps, -76 dBm @ 36 Mbps,<br/> -72 dBm @ 48 Mbps, -70 dBm @ 54 Mbps</p> <p>802.11n (2.4 GHz):<br/> -69 dBm @ MCS15 20 MHz,<br/> -71 dBm @ MCS7 20 MHz</p> <p>802.11a:<br/> -87 dBm @ 6 Mbps, -86 dBm @ 9 Mbps,<br/> -85 dBm @ 12 Mbps, -82 dBm @ 18 Mbps,<br/> -80 dBm @ 24 Mbps, -76 dBm @ 36 Mbps,<br/> -72 dBm @ 48 Mbps, -70 dBm @ 54 Mbps</p> <p>802.11n (5 GHz):<br/> -68 dBm @ MCS15 40 MHz, -69 dBm @ MCS15<br/> 20 MHz,<br/> -70 dBm @ MCS7 40 MHz, -71 dBm @ MCS7<br/> 20 MHz</p> |
| <b>Protocol Support</b>         |  |
| General Protocols               | Proxy ARP, DNS, HTTP, HTTPS, IP, ICMP, SNMP, TCP, UDP, RADIUS, SNMP, DHCP, VLAN, STP/RSTP  |
| <b>Interface</b>                |  |
| Default Antennas                | 4 dual-band omni-directional antennas, 5 dBi at 2.4 GHz, 2 dBi at 5 GHz, N-type (male)   |
| Connector for External Antennas | N-type (female)  |
| LAN Ports                       | 2, 8-pin M12 A-coded (female), 10/100/1000BaseT(X), auto negotiation speed, F/H duplex mode, and auto MDI/MDI-X connection (female)  |
| Console Port                    | RS-232 (waterproof RJ45-type)  |
| Reset                           | Present  |
| LED Indicators                  | PWR, FAULT, STATE, WLAN1, WLAN2, LAN1, LAN2  |
| Alarm Contact (digital output)  | 8-pin M12 A-coded (male), 1 relay output with current carrying capacity of 1 A @ 24 VDC  |
| Digital Inputs                  | <p>8-pin M12 A-coded (male), 2 electrically isolated inputs</p> <ul style="list-style-type: none"> <li>• +13 to +30 V for state "1"</li> <li>• +3 to -30 V for state "0"</li> <li>• Max. input current: 8 mA</li> </ul>  |

| Physical Characteristics  |  |
|---|--|
| Housing   | Metal, IP68 protection   |
| Weight  | 1699 g (3.75 lb)   |
| Dimensions  | 224 x 148 x 67 mm (8.82 x 5.82 x 2.62 in)  |
| Installation  | Wall mounting (standard),<br>DIN-rail mounting (optional),<br>pole mounting (optional)   |
| Environmental Limits  |  |
| Operating Temperature   | -40 to 75°C (-40 to 167°F)   |
| Storage Temperature   | -40 to 85°C (-40 to 185°F)   |
| Ambient Relative Humidity   | 5% to 95% (non-condensing)   |
| Power Requirements  |  |
| Input Voltage   | 12 to 48 VDC, redundant dual DC power inputs or 48 VDC Power-over-Ethernet Plus (IEEE 802.3at compliant)   |
| Input Current   | 1.5 A @ 12 VDC   |
| Connector   | 5-pin M12 A-coded (male)   |
| Power Consumption   | 18 W   |
| Reverse Polarity Protection   | Present  |
| Standards and Certifications  |  |
| Safety  | UL 60950-1, EN 60950-1   |
| EMC   | EN 55032/55024   |
| EMI   | CISPR 32, FCC Part 15B Class A   |
| EMS   | IEC 61000-4-2 ESD: Contact: 8 kV; Air: 15 kV<br>IEC 61000-4-3 RS: 80 MHz to 1 GHz: 10 V/m<br>IEC 61000-4-4 EFT: Power: 4 kV; Signal: 2 kV<br>IEC 61000-4-5 Surge: Power: 2 kV; Signal: 1 kV<br>IEC 61000-4-6 CS: 10 V<br>IEC 61000-4-8 |
| Radio   | EN 301 489-1/17, EN 300 328, EN 301 893,<br>TELEC, FCC ID SLE-WAPN001  |
| Please check Moxa's website for the most recent certification status. |  |
| Warranty  |  |
| Warranty Period   | 5 years  |
| Details   | See <a href="http://www.moxa.com/warranty">www.moxa.com/warranty</a>   |

## RESTRICTED ACCESS ONLY

This equipment is intended to be installed only in **restricted access locations** such as server rooms with limited access to SERVICE PERSONNEL or USERS who have been instructed on how to handle the device. During normal operations, **this device can reach temperatures high enough to require special protection before handling**. Installation locations should be within locked, confined spaces that are accessible only with a key or through security identification systems.

**The external metal parts of this equipment can get extremely hot!!**

Before handling the device, service personnel must take special precautions to protect their hands and body from serious injury.